


KHADAS









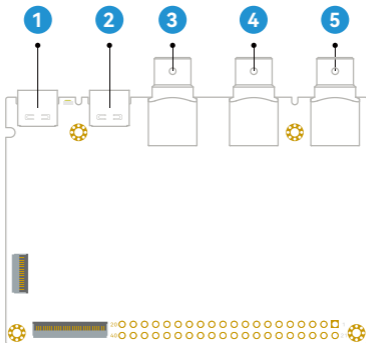



Tone2 Maker Kit

Hi-Fi USB DAC Audio Board

Quickstart Guide

 
Setup




- 1**    **Computer / Smartphone / SBC (data-in and power-in)**
- 2**   **'Khas BT Magic' Bluetooth audio receiver module / USB-C 5V linear power supply (power-in)**
- 3**  **CD player (S/PDIF coax-in)**
- 4**    **Pre-amp (analog out)-> Amp -> Hi-Fi speaker**
- 5**    **Pre-amp (analog out)-> Amp -> Hi-Fi speaker**

*The 'Khas BT Magic' Bluetooth audio receiver module needs to be purchased separately.

Interfaces

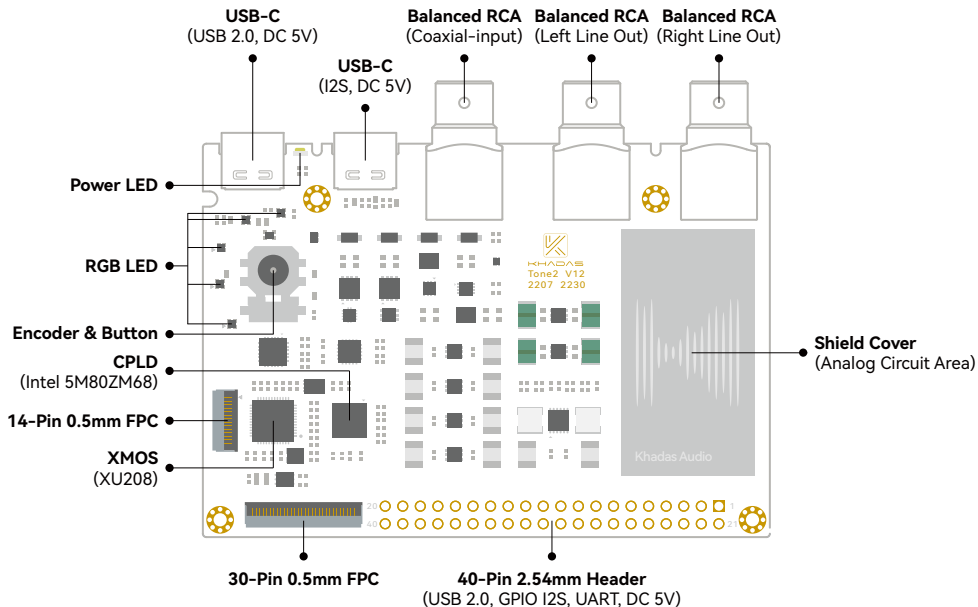

Interfaces

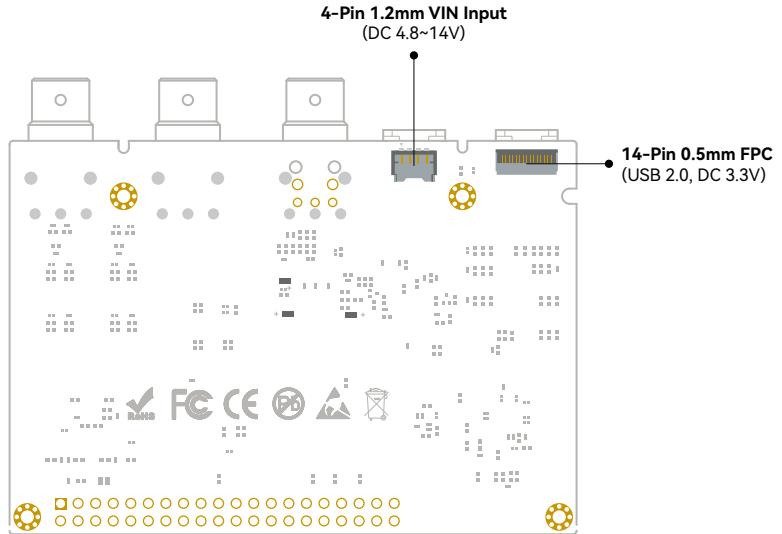 

Maker Guide

1 Document Download Instruction

Schematics: dl.khadas.com/products/tone2/schematic/

Specification: dl.khadas.com/products/tone2/specs/

2D DXF: dl.khadas.com/products/tone2/dxf/

3D CAD: dl.khadas.com/products/tone2/cad/

Encoder Specifications: dl.khadas.com/products/tone2/specs/

Encoder & Enclosure 3D CAD: dl.khadas.com/products/tone2/cad/

2 Website Introduction

For the function, usage and Pin definition of each extended interface and more technical information, you can visit docs.khadas.com/tone2.

If you encounter technical issues during development, seek help at forum.khadas.com.


To purchase additional accessories, please visit www.khadas.com/shop.

Driver Installation

- 1 Install the Khadas ASIO USB driver**
Download the latest driver from dl.khadas.com/products/tone2/driver
- 2 Restart your Windows PC**
The Khadas ASIO USB driver will activate after your PC restarts.



1 Step 1

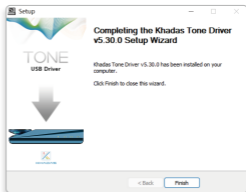


2 Step 2


* Windows' default USB audio driver has high latency, low sampling rates, and does not support ASIO. For a better user experience, please install the Khadas ASIO USB driver.

Firmware Upgrade


- 1 Open the Khadas DFU Upgrade Tool**
Download the latest tool from dl.khadas.com/products/tone2/dfu_tool
- 2 Download the latest Tone2 firmware**
Download the latest firmware from dl.khadas.com/products/tone2/firmware
- 3 Flash new firmware to Tone2**
Connect your Tone2 via a USB-C cable to your PC, and use the DFU tool to burn the new firmware.
- 4 Power off and restart your Tone2**
After the firmware update is completed, Tone2 needs to be powered off and restarted to activate the new firmware.

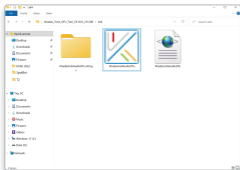

1 Step 1

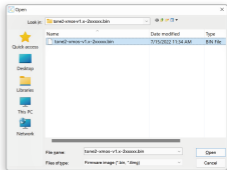

2 Step 2

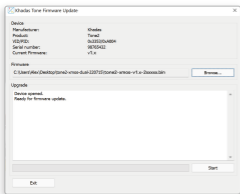


3 Step 3

Volume Knob

1 Push


2 Rotate

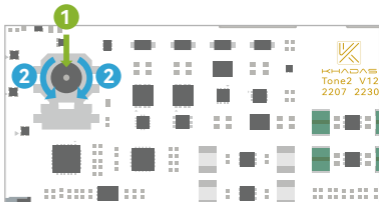

Action		1 Push				2 Rotate	
Mode	Function	Single	Double	Triple	Long	Clock	Anti-C
General	Play/Stop	*					
	Lock/Unlock			***			
	Off				*****		
	On	*					
	Erase BT record				*****		
Volume	Increase		** Mode switch			↻	
	Decrease		** Mode switch				↻
Track	Next		** Mode switch			↻	
	Previous		** Mode switch				↻
Input	Next		** Mode switch			↻	
	Previous		** Mode switch				↻
Filter	Next		** Mode switch			↻	
	Previous		** Mode switch				↻

* With the external Bluetooth Module plugged-in and Tone2 powered off (USB cable with 5V power still plugged-in), long-press the volume knob for 5s to clear the Bluetooth pairing record.

Power Priority

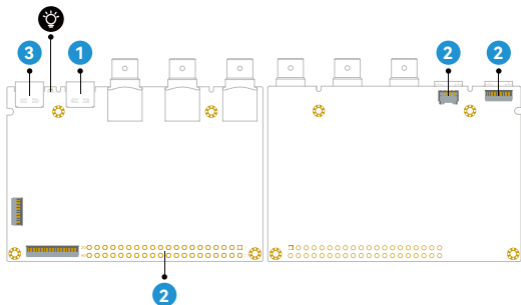

Priority	Power supply	Power LED color
1	USB-C (I2S, DC 5V)	White
2	40-Pin 2.54mm Header (USB 2.0, GPIO I2S, UART, DC 5V)	Red
2	4-Pin 1.2mm VIN Input (DC 4.8~14V)	Red
2	14-Pin 0.5mm FPC (USB 2.0, DC 3.3V)	Red
3	USB-C (USB 2.0, DC 5V)	Light red

* Refer to docs.khadas.com/tone2 for the priority of power input to each I/O interface.

* The USB-C (I2S) interface is not standard. Only specific cables (sold separately) can be used for linear power supplies connected to the USB (I2S) port.

Light Interpretation

 **Volume**
turquoise



Volume
(mute)



1-20%



21-40%



41-60%



61-80%



81-100%


HID volume adjusting
(Flashes 3 times)

 **Track**
red



Track

* HID volume adjusting refers to the 'system volume' of the playback device, e.g. PC, Smartphone, Tablet.

 **Input selection**
yellow, red



USB



S/PDIF




I2S



GPIO (I2S)



AUTO

 **Filter selection**
blue, red



Linear fast



Linear slow



Mini fast



Mini slow



Apodizing



Hybrid fast



Brick wall

* In 'S/PDIF' input mode, playing, pausing, skipping tracks and adjusting HID volume are not supported.

* GPIO (I2S) input refers to input I2S signal via GPIO interface, it's only supported in the Tone2 Maker Kit.

 **DSD format**
white



64



128



256



512

 **PCM format**
yellow



44.1 / 48K



88.2 / 96K



176.4 / 192K



352.8 / 384K



705.6 / 768K

* The audio format is only indicated by the RGB ring light when Tone2 is in 'USB' input mode.

○ **Encoder locked**
white



Locked
(Flashes 3 times)

● **Power off**
grey



Power off

FAQ

Which Khadas single board computers can be connected to the Tone2 Maker Kit's 40-pin 2.54mm header?

The VIM1S, VIM3, VIM3L and VIM4 are all supported, however you will need to solder a female 40-pin header to the Tone2 first. Please refer to the instructions in docs.khadas.com/tone2 for more information.

Please note that the Khadas Warranty Service is no longer valid once you have performed soldering on the Maker Kit.

Which Khadas single board computers can be connected to the 14-pin 0.5mm FPC header on the bottom of the Tone2 Maker Kit?

The VIM3, VIM3L, VIM4 can be connected to the Tone2 Maker Kit in this way via their onboard female M.2 connector. You will need to purchase the Khadas T2V adapter board for this purpose. For specific information, please refer to the instructions in docs.khadas.com/tone2.

I have connected DC power to the VIN interface, however the Tone2 Maker Kit does not power on, please help.

Firstly, ensure that the supplied voltage is between 4.8 to 14V. Secondly, please check if there are any discrepancies with the DC power connector's pin layout. Please refer to the instructions in docs.khadas.com/tone2 for the pin layouts for each I/O interface on the Tone2 Maker Kit.

What is the electrostatic protection level of the Tone2 Maker Kit?

All interfaces have undergone static discharge testing, the protection level is 1000V for contact and 3000V for non-contact. Do not touch the PCBA's circuits when the board is powered on to avoid undesirable effects; such as damage to the board.

Why does Windows require the Khadas USB driver?

The Khadas USB driver provides ASIO support and removes the latency and sample rate conversion issue experienced with the default Windows USB driver for DACs.

What is Balanced RCA?

A new balanced audio connector standard, designed by Khadas for small form-factor desktop DACs. It is backwards compatible with standard RCA plugs and cables, more details visit <https://khadas.com/balanced-rca>

How do I use my existing XLR-3 equipment with Balanced RCA?

Purchase the Khadas Balanced-RCA to XLR-3 adapter; it is a male Balanced-RCA plug connected to a male XLR-3 plug.

How do I use 'S/PDIF' input?

Attach a standard RCA cable to the orange-coloured RCA jack, and set the input mode to 'S/PDIF'. Alternatively, set the input mode to 'AUTO' and stop music playback from other sources.

How do I connect my smartphone to Tone2 via Bluetooth?

Attach a Khadas bluetooth module to the USB-C (I2S) port, and set input mode to 'I2S'.

Can the USB-C input be used with the USB-C output of Android phone?

Yes, Tone2 can be powered by most Android smartphones via USB-C.

What are the input priorities of the 'Auto' input mode?

When connecting both USB-C (USB) and S/PDIF interface in 'Auto' input mode, "USB" input has the highest priority.

When music playback over USB is stopped (you do not need to remove the USB cable), input will switch to the 'S/PDIF'.

Refer to docs.khadas.com/tone2 for the priority of audio input to each I/O interface.

Can I connect Tone2 to my iPhone or iPad?

Apple's iPhone does not support the Tone2. You can still connect Tone2 to your iPad using a USB-C to C cable, but the Tone2 device information will not appear on your iPad.

Does the Tone2 support native DSD decoding?

Yes, DSD512 native decoding can be enabled by installing the Khadas USB driver.

What is the voltage level of the Balanced RCA connection?

4.0Vrms for balanced RCA mode, and 2.0Vrms for standard RCA mode (single-ended).

Can I use the Tone2 to receive a signal from the TV via coaxial and send it to the amplifier via RCA?

Yes. Set the input mode as 'S/PDIF' or 'Auto', Tone2 will output to the RCA.

Can I supply power to the USB (I2S) interface using my computer, PC or laptop?

No. Please instead connect a linear power supply or battery bank to the USB (I2S) interface.

How do I adjust the HID (system) volume using the volume knob?

When Tone2 is not at or above maximum volume, turning the volume knob clockwise will increase the device's hardware volume. Once Tone2 is at maximum volume, continuing to turn the knob clockwise will cause the RGB indicator to flash turquoise 3 times. Continuing to turn the knob clockwise after this point will instead increase the HID (system) volume of your PC.

Why can't I adjust the HID volume whilst playing DSD formatted audio?

Tone2 does not support HID volume adjustment whilst playing DSD formatted audio.

Troubleshooting Guide

The Volume Knob is unresponsive and flashing full-white when I turn it.

It has been locked, triple-press it to unlock.

My Android phone can't detect Tone2, the power LED remains off, and USB-C is plugged-in correctly.

Go to 'Settings' and enable the 'USB-OTG' feature, most phones have this off by default.

My Tone2 is connected to my PC and I'm playing a song but there's no sound!

Check your computer's sound-output device, switch from 'Speakers' to the 'Tone2'. Secondly, check that your Tone2's input mode is set to 'USB' or 'Auto'.

Help! I've connected my PC to the Tone2 and the lights are on, but my computer cannot detect it!

Ensure that you've plugged your USB-C cable into the USB-C port labelled 'USB'.

I cannot hear any sound from Tone2 when playing music through the S/PDIF input.

Check to ensure that your music is not DSD formatted. The 'S/PDIF' input does not support playback of DSD music.

HID volume control does not work when playing non-DSD formatted audio and the input source is set to USB input.

Please check if there is more than one audio player running simultaneously on your playback device. In such cases, the HID volume control command will only be sent to one of the audio players. Close additional audio players, only open one audio player when using your Tone2.

Specifications

Balanced RCA Line-Out Performance

- THD+N: 0.000126% (-118dB)
- DNR: 121dB
- Crosstalk, 200K Ω : > 120dB
- Noise level: 3.5uVrms
- Output, 200K Ω : 4.0Vrms

Single End RCA Line-out Performance

- THD+N: 0.000158%(-116dB)
- DNR: 118dB
- Crosstalk, 200k Ω : >118dB
- Noise Level: 2.3uVrms
- Output, 100K Ω : 2.0Vrms

What's In The Box



Tone2 Maker Kit * 1pcs



Instruction Manual * 1pcs



Warranty Card * 1pcs

Manufacturer: Khadas Technology Co., Ltd.

Tel: +86 755 2307 6626 **E-mail:** support@khadas.com

Address: Room 2709, Floor 27, Qiancheng Center, Haicheng Road,
Xixiang Street, Bao'an District, Shenzhen

生产商: 哈哒科技 (深圳) 有限公司

电话: +86 755 2307 6626 **邮箱:** support@khadas.com

地址: 深圳市宝安区西乡街道海城路5号前城商业中心2709

www.khadas.com