

DIY Case2  
Installation Guide

KHADAS


1 Dear users, there are three kinds of screws ① ② ③.  
The following is a detailed description of the specifications  
and uses of each type of screw.

① Quantity: 4pcs  
Head diam: 2.50mm  
Thread: 3.00mm


② Quantity: 4pcs  
Head diam: 3.50mm  
Thread: 4.50mm

③ Quantity: 4pcs  
Head diam: 3.50mm  
Thread: 6.00mm


2 Insert the antennas into the antenna bracket.

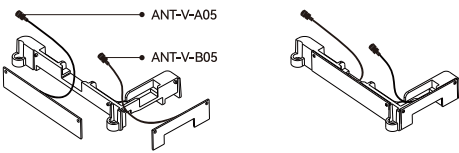


3 Insert the VIM SBC into the lower case.

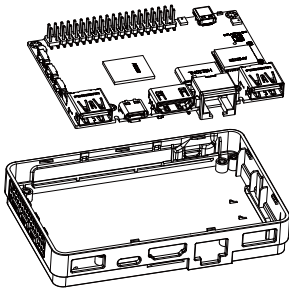


4 Connect the antenna wires to the SBC, leaving the antenna  
bracket separate.

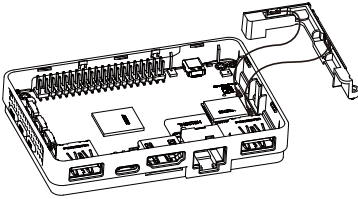

5 Place the silicone thermal pad onto the SoC, followed by the  
heatsink and fan. (If you don't have the cooling kit, skip this step)

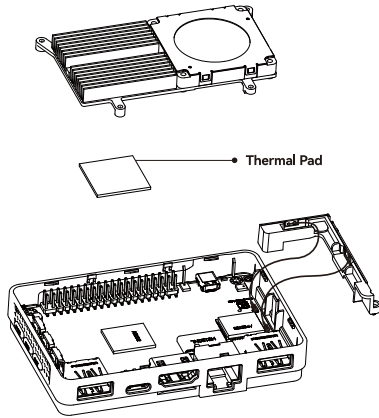


6 Tighten the four screws to secure the SBC to the case, then  
align the antenna bracket with the antenna sockets.

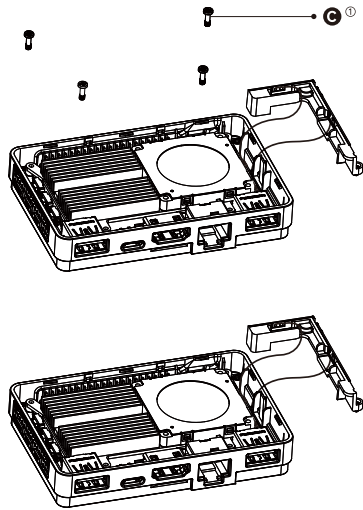


① If you don't have the cooling kit, Please use screw ②


7 Tighten the screws that secure the antenna bracket to the case.

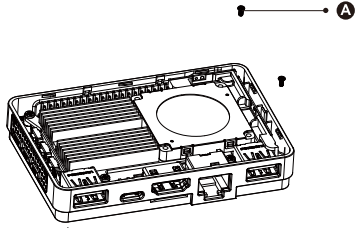


8 Align the upper lid with the casing and press down firmly. If it  
is aligned correctly, you'll hear the clips clicking into place. If  
you don't hear a click, recheck your alignment and try again.

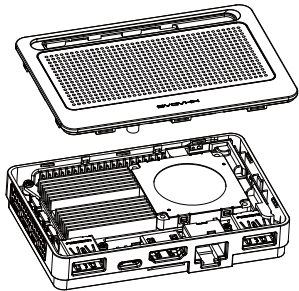

9 Tighten the two side screws, then install the dust cover for the pin  
header.

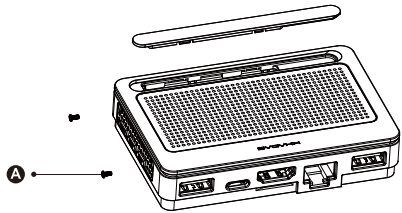

10 Installation completed.

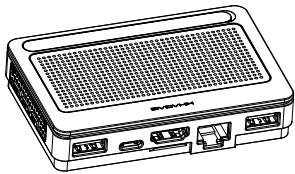

Khadas Technology Co., Ltd.  
support@khadas.com  
www.khadas.com

<div><div>深圳世野科技 有限公司</div></div>					物料名称:	DIY Case2 _安装说明书_78x110mm_105g铜板纸单黑四折页				
					材质:	105g铜板纸				
图纸版本					尺寸:	78x110mm				
					印刷:	四色印刷				
	签名		年/月/日							
设计										
审核										
批准										
					工艺:	无				